

COBY®

MP-805

2.4" LCD High-Resolution MP3 and Video Player



QUICK SETUP GUIDE

Thank you for choosing a COBY MP3 player!

This guide will cover how to get started playing music with your COBY player. For more information about your player and its features, please consult the Instruction Manual or visit us on the web at www.cobyusa.com.

Requirements

Make sure you have the following items ready to start playing music on your COBY MP3 player.

Coby MP3 Player, Headphones, and USB Cable

- ✦ If your COBY uses a rechargeable battery, make sure that it has been fully charged.
- ✦ Connect the headphones to the headphone jack on your COBY.

Computer with USB support

- ✦ Most modern computers come equipped with a USB port. Please check with the computer manufacturer if you are not sure that your computer has USB support.

Windows Media Player 11 (WMP11)

- ✦ The directions in this guide are given for WMP11, but you may use any media management software on your computer.

Getting Started with **MUSIC** Transfer

To start playing music, you will need to:

- ✦ Music files on your computer
- ✦ Transfer the music files to your COBY player
- ✦ Start music playback on your COBY player



Windows Media Player 11 (WMP11)

If your computer does not have Windows Media Player installed, please download the latest version of Windows Media Player (WMP) from Microsoft's website.

<http://www.microsoft.com/windows/windowsmedia/player/download/download.aspx>

The current version available is Windows Media Player 11.

After you have followed Microsoft's instructions to install WMP on your computer, you will be ready to put music files on your computer.



For more information about how to use the features of WMP, press the F1 key on your keyboard while the program is running.


Put MP3 Music Files on Your Computer

If you **already** have MP3 or WMA music files on your computer, transfer them by:

- a)** Locate your files, **b)** Copy and Paste or Drag and Drop your existing files,
- c)** In the Removable Disk, **d)** In the Music Folder, **e)** Located under “MY Computer”.

If you do not have music files:


1) Launch the WMP11 program.

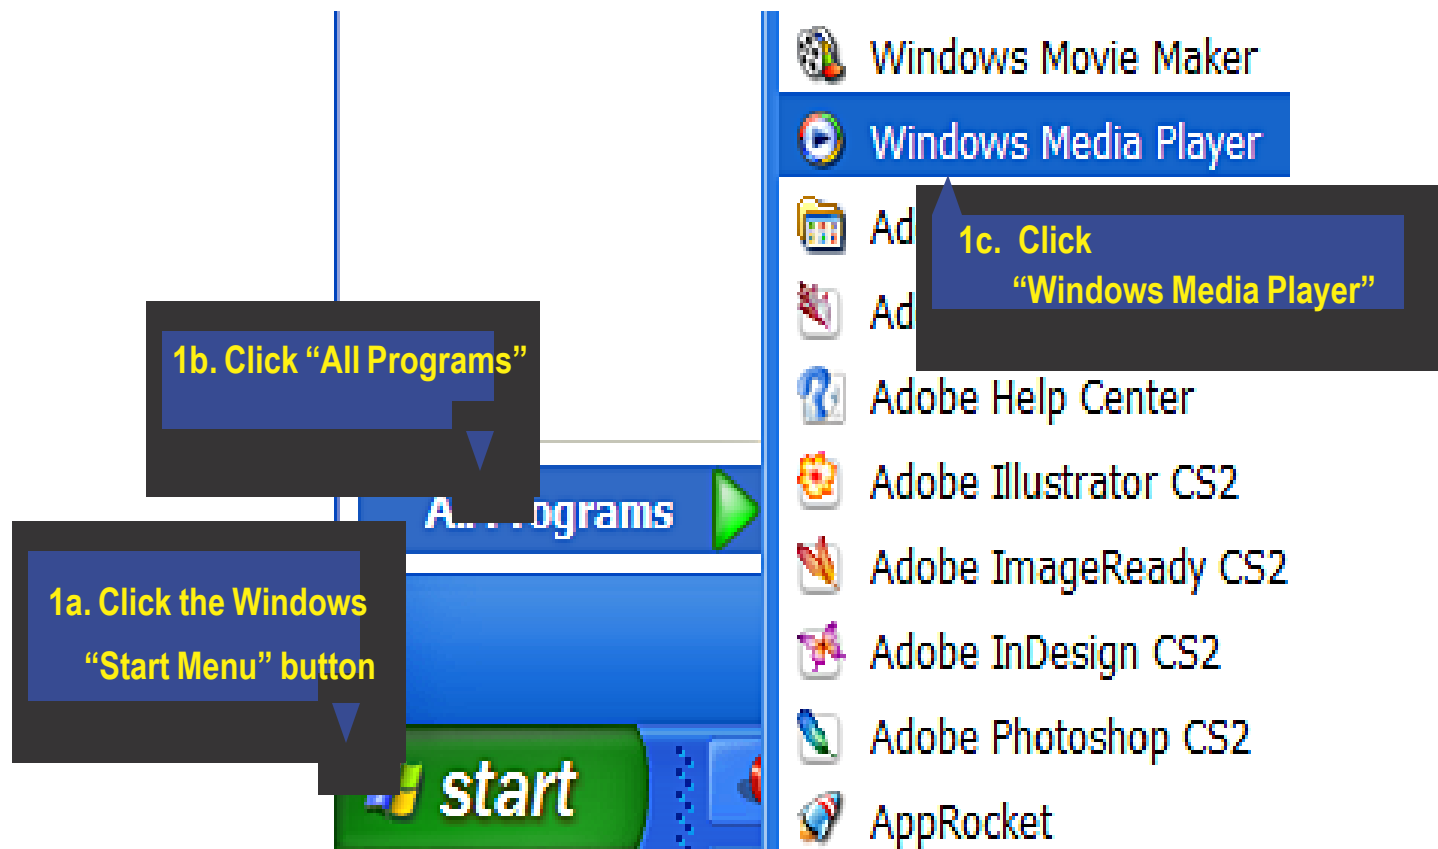

2) Put an audio CD into the CD-ROM drive of your computer.

If your computer has an internet connection, WMP will automatically retrieve and display the album information.

- ✦ Click the checkboxes to select which tracks to rip. To rip the entire album, check all of the boxes.

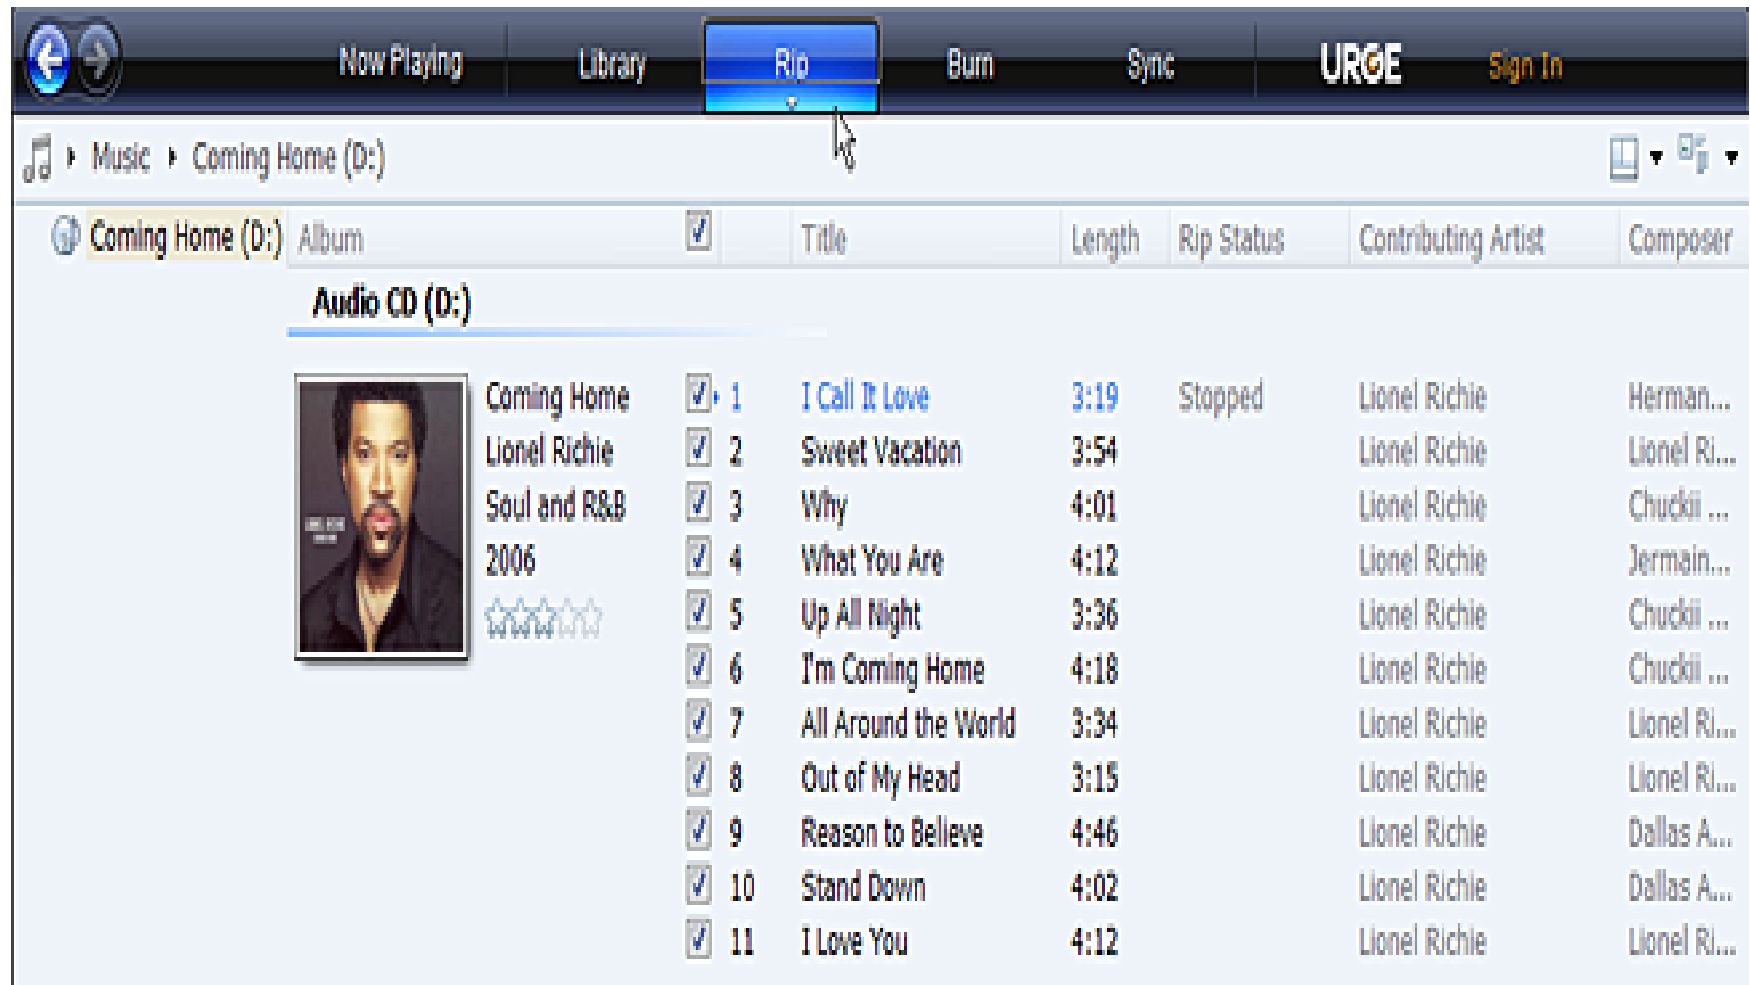

The screenshot shows the Windows Media Player interface with the 'Rip' tab selected. The album 'Coming Home (D:)' by Lionel Richie is displayed. The track list includes 11 tracks, all of which are selected for ripping (indicated by checked checkboxes).

Album	Title	Length	Rip Status	Contributing Artist	Composer
Coming Home (D:)	I Call It Love	3:19	Stopped	Lionel Richie	Herman...
Lionel Richie	Sweet Vacation	3:54		Lionel Richie	Lionel Ri...
Soul and R&B	Why	4:01		Lionel Richie	Chuckii ...
2006	What You Are	4:12		Lionel Richie	Jermain...
	Up All Night	3:36		Lionel Richie	Chuckii ...
	I'm Coming Home	4:18		Lionel Richie	Chuckii ...
	All Around the World	3:34		Lionel Richie	Lionel Ri...
	Out of My Head	3:15		Lionel Richie	Lionel Ri...
	Reason to Believe	4:46		Lionel Richie	Dallas A...
	Stand Down	4:02		Lionel Richie	Dallas A...
	I Love You	4:12		Lionel Richie	Lionel Ri...

3) Set the Rip Options (optional).

- ✦ Click the “Rip” button to set the Rip options. The recommended Rip settings are:
 - ✧ Select “Format > mp3”
 - ✧ Select “Bit Rate > 128 Kbps”
 - ✧ Select “More Options” to change the directory to which WMP saves your ripped music files. WMP will save your music to your “My Documents > My Music” folder by default.



4) Start ripping the CD.

- ✦ Click the “Rip” button and select “Rip” to start converting the audio CD to MP3/WMA digital music files.



- ✦ The ripping process will take a few minutes to complete. WMP will save the converted music files to your “My Documents > My Music” folder by default.



Transfer MP3/WMA Files to Your COBY Player


Once you have MP3 or WMA digital music files on your computer, transfer them to your COBY player in order to listen to music anywhere.

Use WMP11 to transfer (sync) music from your computer to your COBY MP3 player.


1) Launch the WMP11 program.

2) Connect your COBY player to a USB port on the computer.

✦ WMP11 will detect your COBY player automatically.

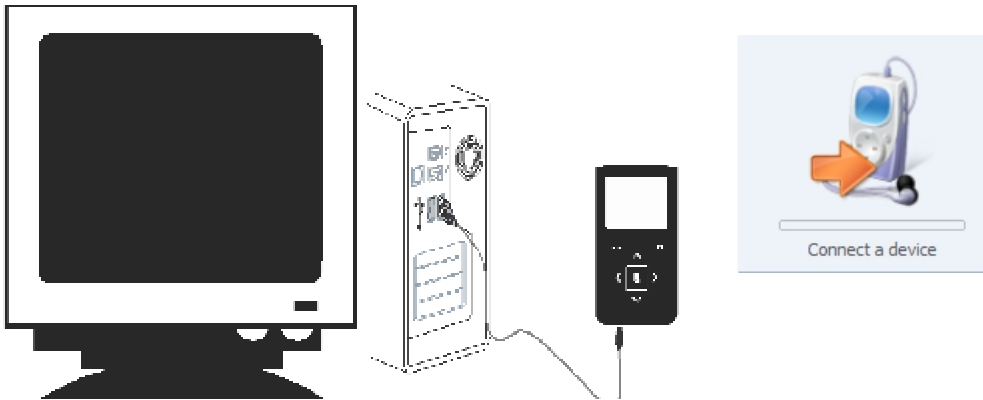

3) Browse your music library to choose songs to sync.

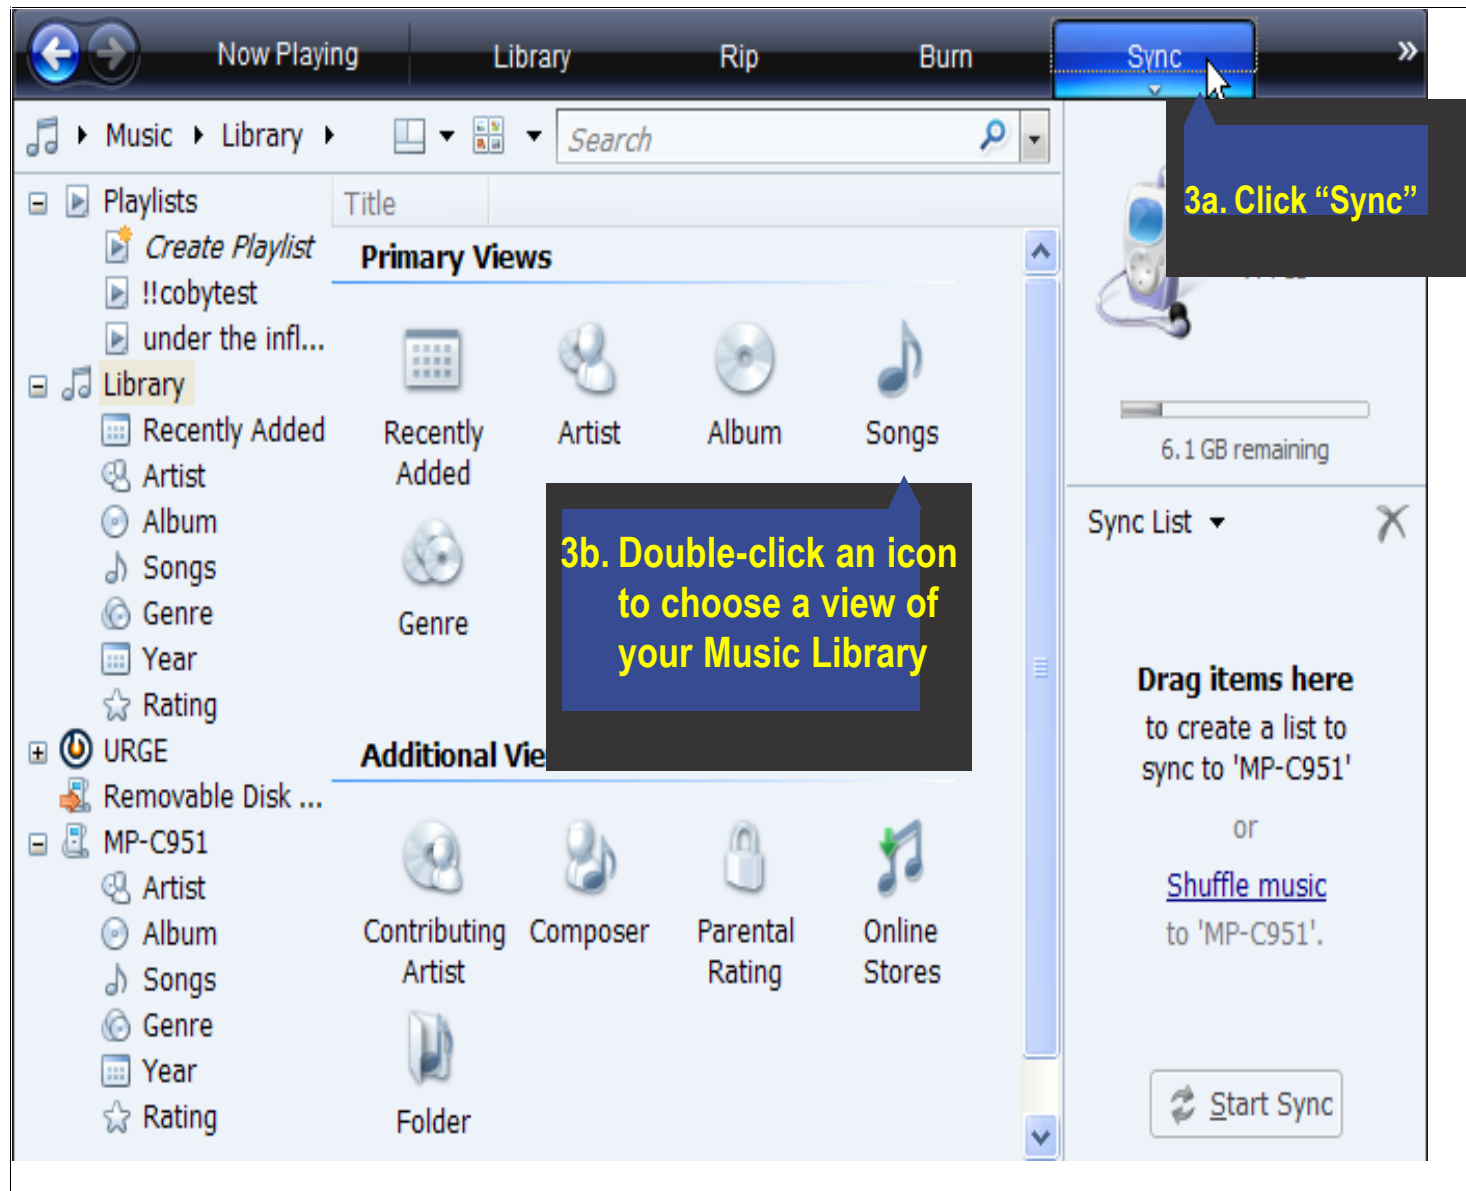

4) Select songs to sync to your COBY player.

The screenshot shows the iTunes application window with the 'Sync' tab selected. The search bar at the top contains the text 'lion'. Below the search bar, the 'Album' section lists 'Germes' and 'Lionel Richie'. The 'Lionel Richie' album is expanded, showing a list of songs. A mouse cursor is hovering over the song 'Stand Down'. On the right side of the window, the 'Sync List' is visible, showing a list of songs that have been added to the sync list. A 'Start Sync' button is located at the bottom right of the window.

4a. Type in the Search bar to quickly find a Song

4b. Click on a track to select it for synchronization. To select multiple tracks, hold CTRL or SHIFT and click on the track.

4c. Drag the selected tracks here to add them to the Sync List

4d. Click "Start Sync" to transfer the Sync List to your COBY player

5) Disconnect your COBY player from the computer.

Once the sync process is complete, unplug your player from the USB port of the computer. Now you're ready to listen to music on your COBY player.

The screenshot shows the URGE software interface. At the top, there are tabs for 'Now Playing', 'Library', 'Rip', 'Burn', and 'Sync'. The 'Sync' tab is active. Below the tabs, the breadcrumb path is 'MP-C951 > Sync Results'. A search bar is visible. On the left, a sidebar shows a tree view with 'URGE' and 'Removable D...' expanded, and 'MP-C951' selected. Under 'MP-C951', 'Sync Res...' is highlighted. The main area displays a table titled 'Files You Added' with columns 'Title', 'Status', and 'Playlist'. The table lists 12 songs, all with a status of 'Synchronized to device' and a playlist of 'Files You Added'. On the right, a panel shows a device icon for 'MP-C951', 'Generic', with '7.4 GB' capacity. A progress bar indicates '6 GB remaining'. Below this, a 'Sync List' section shows a message: 'You can now disconnect 'MP-C951'.' and a 'Start Sync' button.

Title	Status	Playlist
Many Rivers To Cross	Synchronized to device	Files You Added
Homeland and Hip Hop	Synchronized to device	Files You Added
Damaged Goods	Synchronized to device	Files You Added
Two-Headed Boy	Synchronized to device	Files You Added
05 - 53rd & 3rd	Synchronized to device	Files You Added
The Illest (ft. Jean Gr...	Synchronized to device	Files You Added
Hater's Anthem	Synchronized to device	Files You Added
Hustler's Ambition	Synchronized to device	Files You Added
Holla (Ft. Dr.Dre)	Synchronized to device	Files You Added
Mos Def & Talib Kweli...	Synchronized to device	Files You Added
Revolution 909	Synchronized to device	Files You Added
Daft Punk Is Playing A...	Synchronized to device	Files You Added

Start Listening to Music on Your COBY Player

Now that you have transferred music to your COBY player, you're ready to take your music with you anywhere.

- ✦ Connect a pair of headphones or earphones to the headphone jack of your COBY MP3 player.
- ✦ Turn on your COBY player (Slide the Power Button to the "ON" position and Press and hold the "PLAY" button for five (5) seconds.
- ✦ Start the playback on your COBY player by entering the "Music" menu and press Play.

Music List

Use the Music List to view all compatible music tracks loaded on your player. Press **MENU** while in MUSIC mode to view the Music List.

- ✦ Press **+** to move the selection down; press **-** to move the selection up.
- ✦ Press **▶/□** to enter a folder or to play a selection. Press **◀◀** to return to the previous screen.
- ✦ Press and hold **MENU** to cancel and return to the Main Menu.



Press **MENU** to toggle between the Music List and Now Playing screens.



For more information about how to control your COBY MP3 player, please consult the Instruction Manual.


Getting Started with **VIDEO** Transfer

Install the conversion software (AVIConverter)

1. Insert the Installation CD in your CD/DVD drive
2. Double-click on the AVI Converter Folder then Double-click on the “**AVIConverter CHN-EN Package Setup.exe**” file to start the installation process.
3. Follow the on-screen instructions to complete the installation process.

Converting Video

To start the program, double-click the AVI Converter shortcut on your desktop. The application window shown below will appear.

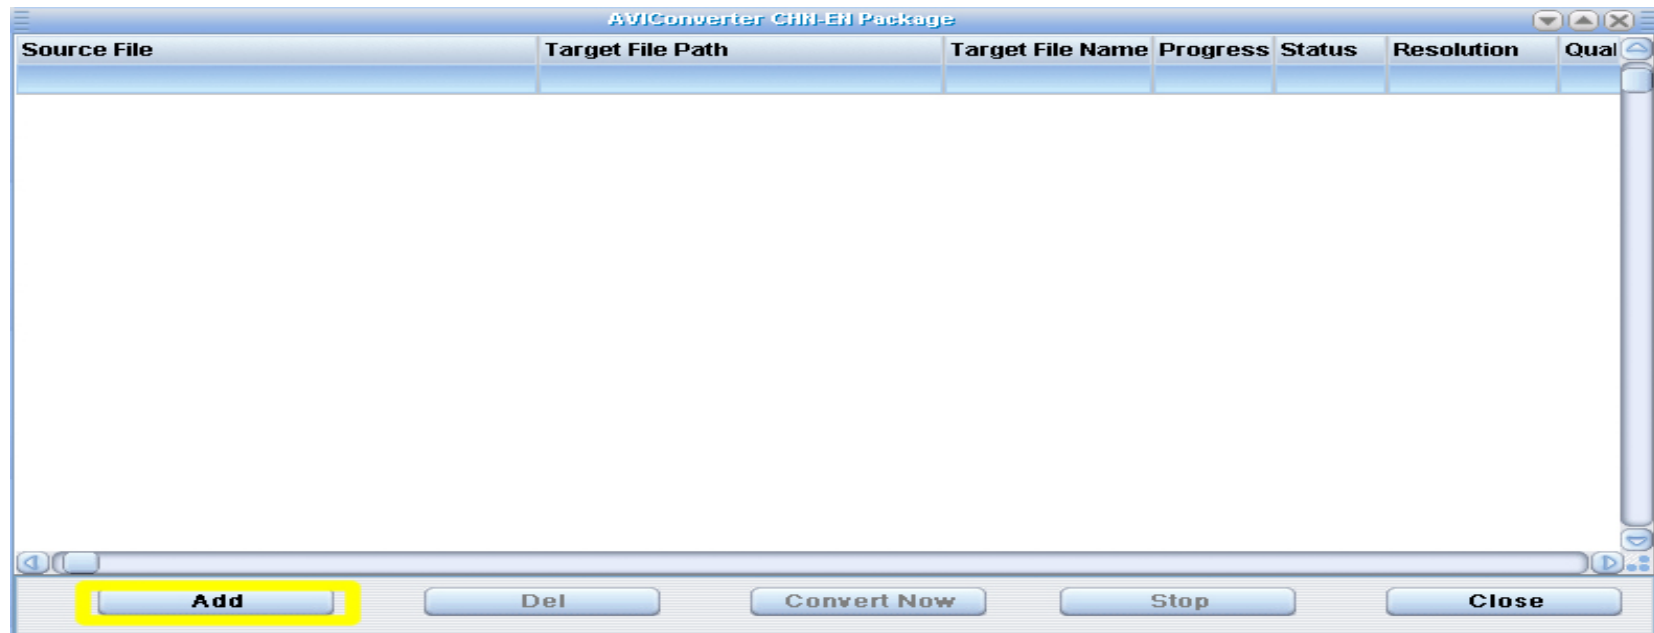


Click the “**Add**” button.

The Conversion setting screen will appear.
Use this screen to add video conversion jobs to the queue.

1. Set the Resolution to “320x240” as shown in the diagram.
2. Locate the files needed to be converted, click the shaded box indicated in the diagram. The source file must be one of the following video types: AVI, RM, RMVB, MPG, MPEG, MP4, ASF, WMV, MKV, DAT, or VOB.
3. Select the Target File Path (destination folder) where the converted video will be saved to, click the shaded box indicated in the diagram.
4. Type the desired file name for the converted video file.
5. After all options have been selected, click the “Save” button to save this conversion job to the queue.
6. Once there are no more video conversion jobs to add to the queue, click the Close button to return to the application window shown below.

The screenshot shows a 'Conversion Setting' dialog box with the following fields and buttons:

- Resolution:** A dropdown menu set to '320x240'. A yellow box highlights this field with a large number '1'.
- Source File:** A text field containing 'C:\Documents and Settings\Mike\Shared\Timbaland feat. Keri Hilson - Tr'. A yellow box highlights this field with a large number '2'.
- Target File Path:** A text field containing 'C:\Documents and Settings\Mike\Desktop'. A yellow box highlights this field with a large number '3'.
- Target File Name:** A text field containing 'Timbaland feat. Keri Hilson - The V'. A yellow box highlights this field with a large number '4'.
- Setting:** A section containing two dropdown menus: 'Quality' set to 'High' and 'Aspect Ratio' set to 'Full'.
- Scope:** A section containing two time duration fields: 'Begin from:' (0 h 0 m) and 'Time Duration:' (0 h 0 m).
- Buttons:** At the bottom, there are two buttons: 'Save' and 'Close'. Both are highlighted with yellow boxes and large numbers '5' and '6' respectively.
- Help:** A blue 'Help' link is located in the top right corner.

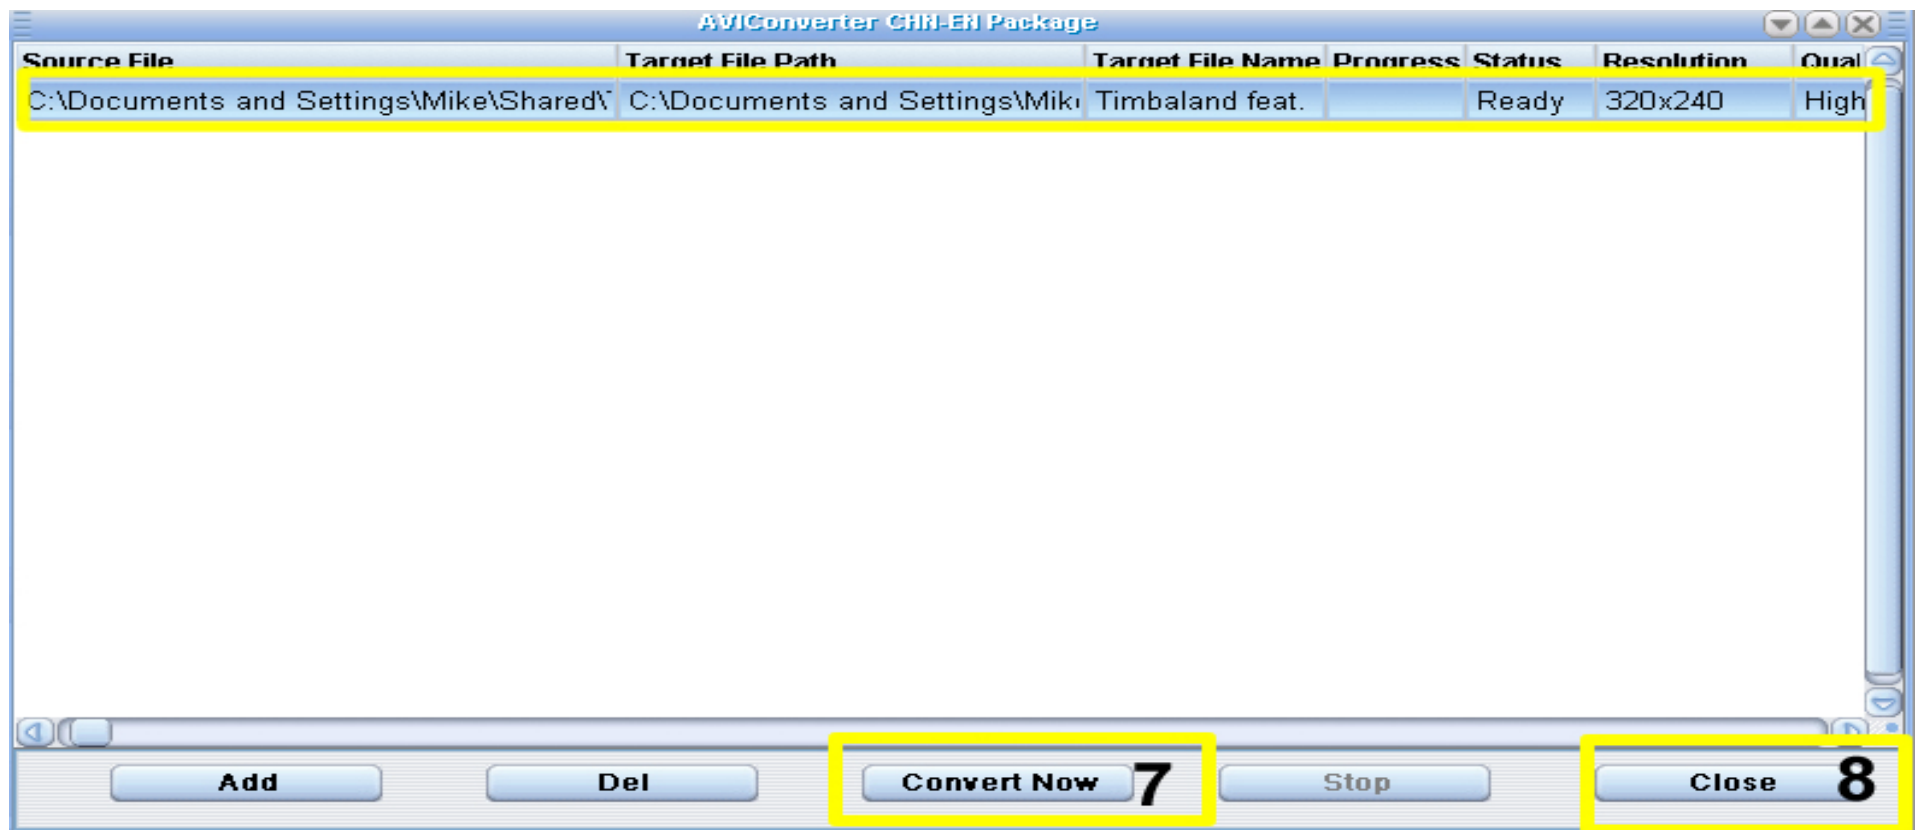

7. The application window should now list all conversion jobs that you have added to the queue. Click the “Convert Now” button to start the conversion process.
8. To exit the program, click the “Close” button.

Transfer the converted VIDEO files to Your COBY Player

1. Connect the player to your computer with the supplied USB 2.0 cable.
2. Double-click on the “MY COMPUTER” icon on your desktop.
3. The player will be listed as two (2) “Removable Disk”. The drive letter will be listed in alphabetic order.

 Removable Disk (E:) **Internal (Flash) Memory**

 Removable Disk (F:) **External (miniSD) Card**

4. Go to the “Target File Path (destination folder) where the converted video files was saved” and Copy and Paste or Drag and Drop the files in the appropriate “Removable Disk”. Done!!!

Start watching Video files on your COBY Player

Now that you have transferred Video files to your COBY player, you're ready to take your music with you anywhere.

- ✦ Connect a pair of headphones or earphones to the headphone jack of your COBY MP3 player.
- ✦ Turn on your COBY player (Slide the Power Button to the “ON” position and Press and hold the “PLAY” button for five (5) seconds.
- ✦ Start the playback on your COBY player by entering the “Video” menu, select the file and press Play.



For more information about how to control your COBY MP3 player, please consult the Instruction Manual.

Transfer **PHOTO** files to Your COBY Player

1. Connect the player to your computer with the supplied USB 2.0 cable.
2. Double-click on the “MY COMPUTER” icon on your desktop.
3. The player will be listed as two (2) “Removable Disk”. The drive letter will be listed in alphabetic order.



Removable Disk (E:) **Internal (Flash) Memory**



Removable Disk (F:) **External (miniSD) Card**

4. Locate your JPEG image files and Copy and Paste or Drag and Drop the files in the appropriate “Removable Disk”. Done!!!

Start viewing photo files on Your COBY Player

Now that you have transferred photo files to your COBY player, you're ready to view the files.

- ✦ Turn on your COBY player (Slide the Power Button to the “ON” position and Press and hold the “PLAY” button for 5-8 seconds.
- ✦ Start viewing your photo files on your COBY player by entering the “Photo” menu, select the file and press Play.



For more information about how to control your COBY MP3 player, please consult the Instruction Manual.

If you have a problem with this device, please read the troubleshooting guide on the user manual or visit us on the web at www.cobyusa.com for Frequently Asked Questions (FAQs). If these resources do not resolve the problem, please contact Technical Support.

Phone: 800-727-3592

Weekdays 8:00AM–11:00PM EST

Weekends 9:00AM–5:30PM EST

Weekdays 8:00AM–5:30PM EST